Elaho Dual Tech Switch-Mount Occupancy Sensor

Product Line: Elaho Dual Tech Switch-Mount Occupancy

Sensor

Description: Version 3.3.6 Firmware

Elaho Dual Tech Switch-Mount Occupancy Sensor

Components

Elaho Software	3.3.6.966
Echo Protocol	3.3.6.961

Effective Date: 2022-08-11

Purpose

This firmware ports the station functionality to a new onboard station processor form factor.

For any questions relating to the contents of this release or the behavior of this software, please contact Echoflex Solutions using the information at the bottom of this page.

Availability

This firmware is currently available in new shipping units. Dual Tech Switch-Mount Occupancy Sensors are each labeled with the application version number (e.g., v3.3.6) for visual indication of the installed Echo Protocol version.

Documentation

Current documentation for the Elaho Dual Tech Switch-Mount Occupancy Sensor includes the *Elaho Dual Tech Switch-Mount Occupancy Sensor Installation Guide*, the ElahoAccess Mobile App integrated help, and the *ElahoAccess Application Quick Guide*.

Please keep this release note with your installation guide for descriptions of the newest features, changes, and bug fixes. Manuals are in portable document format (pdf) and are available for download at echoflexsolutions.com.

Additional support documentation can be found at support.etcconnect.com.



Dual Tech Switch-Mount Occupancy Sensor v3.3.6

Compatibility

For questions regarding compatibility, please contact Echoflex Solutions Technical Services.

Compatible Elaho Products

This release is interoperable with the following Elaho hardware and software/firmware:

Product	Earliest Device Compatibility	Optimal Feature Compatibility
ElahoAccess App-iOS	v1.0.0	v3.3.1
ElahoAccess App-Android	v1.0.0	v3.3.0
ElahoAccess Interface	v1.0.0	v3.3.6
Elaho Expansion Bridge	v1.0.0	v3.3.6
Elaho BACnet Interface	v3.0.0	v3.3.6
Elaho Integration Interface	v3.3.1	v3.3.6
ElahoTouch	v3.0.0	v3.1.1
Elaho DMX Scene Controller	v1.0.0	v3.3.4
Elaho-Echoflex Interface	v1.0.0	v3.3.6
Elaho Contact Input Interface	v1.0.0	v3.3.4
Elaho Contact Output Interface	v1.0.0	v3.3.6
Elaho Demand Response Interface	v2.0.0	v3.3.4
Elaho Responsive Controls	v1.0.0	v3.3.4
Elaho Dual Tech Occupancy and Vacancy Sensors	v1.0.0	v3.3.6
Elaho Dual Tech Switch-mount Occupancy Sensor	v1.0.0	v3.3.6
Elaho Room Controller - Gen2	v1.0.0	v3.3.6
Elaho Zone Controllers - Gen2	v1.0.0	v3.3.4
Elaho Inspire Stations	v3.0.0	v3.3.6
Elaho Keyswitch Stations	v3.2.0	v3.3.6
Elaho TimeClock	v1.0.0	v3.3.5
Elaho Preset Stations	v3.0.0	v3.3.6
Elaho Relay Panels	v1.0.0	v3.1.3

Key Enhancements in v3.3.6

• New onboard station processor form factor.

Key Enhancements in v3.3.4

• Incorporates improvements from newer Echo Protocol versions.

Key Enhancements in v1.1.1

• Bug fixes.

Key Enhancements in v1.1.0

- Support for Multi Space control features, configurable in the ElahoAccess App.
- · Bug fix.

Dual Tech Switch-Mount Occupancy Sensor v3.3.6

Initial Features in v1.0.0

- Wall-Mount and Ceiling-Mount models available in occupancy or vacancy.
- Uses passive infrared and acoustic detection technologies.
- Thirty-second grace timer.
- Supports walk test function for coverage confirmation.
- Multiple lens coverage options available.
- Available in various color options. See the product datasheet for more information.

Installation Instructions

This software is installed on new Elaho Dual Tech Switch-Mount Occupancy Sensors as they are shipped from the factory and does not require update before use.



Note: Use the ElahoAccess App to determine which firmware build is installed on your device.

Issues Corrected in v3.3.6

None

Known Issues Remaining in v3.3.6

EIDT-47068 Zone vacancy actions do not play if configured from boot

Issues Corrected in Echo Protocol v3.3.6

EC-47215 Presets recorded from Paradigm through EEB always include Space 1

Known Issues Remaining in Echo Protocol v3.3.6

EC-47174	Two hosts with the same color temperature zone patched can result in alternating color temperature indication
EC-47116	Space Toggle button on Inspire station not affected by level of ET channel not patched to zone
EC-47111	Zone/Preset/Sequence status can "flutter" very occasionally due to a receiving host timer rollover
EC-47077	Multi-space off button occasionally flashes on when sequence is still playing
EC-47074	Off actions using timing from an active preset rather than the 2 second standard
EC-47070	Mobile app shows sequences active for sequences 2-4, not just 1
EC-47063	Multi-space hosts maintain preset status in previously-patched spaces
EC-46888	Late joining occupancy sensor controls will assert their configured occupancy action even if associated group was already in occupied state
EC-45629	Hold event configured with fade time for "set to color" actions fades intensity on hold
EC-45596	Differing space/zone levels across bridge segments causes station indication to bounce between values
EC-45462	"Uncombine All" may not uncombine all combined spaces on full Echo bus.
EC-45202	Editing spaces affected by a Demand Response input momentarily sets spaces to false during true condition
EC-44495	Products with Power on behavior can show active zone levels and activated Off status at same time
EC-44432	Manual control from non native space does not trigger occupancy when occupancy action is multi-space
EC-44154	Occupancy groups, vacancy inhibit, and photo inhibit do not support all spaces of a multi-space action
EC-43350	Accessing the Config page on multiple simultaneous mobile app connections causes duplicate devices to be listed
EC-43262	Vacancy action Preset activate can be missed after a grace restore has been triggered due to support for older Occupancy sensors

Dual Tech Switch-Mount Occupancy Sensor v3.3.6

Known Issues Remaining in Echo Protocol v3.3.6 (cont.)

EC-43138	On occasion large batches of patch config messages can fail to transmit correctly resulting in skipped addresses
EC-43020	When two presets are active in the same space, preset indication toggles between both presets
EC-42572	Unable to toggle sequence off from combined space that does not possess a sequence enabled output product
EC-38851	Late joining bridge results in oscillating mismatched Zone values if different segments have different values for same zones
EC-38839	Late joining bridge results in oscillating mismatched statuses if different segments have different status for same spaces
EC-38694	Zone status does not zero out after last output product for that zone changes to new space
EC-35126	Space toggle when Zones are not at full sets Zones to 0 rather than all at full
EC-34543	Sequence indicator toggles state rapidly when output device with sequence active late joins Echo bus with output device that has inactive sequence
EC-28417	Station activity during sync period following connection of late joining output product incorrectly does not cause LED chase