# Echoflex Solutions Release Note

**Elaho Inspire and Preset Station** 

#### Product Line: Description:

#### Elaho Inspire and Preset Station

Version 3.3.4 Firmware

#### Elaho Inspire and Preset Station Components

Elaho Firmware	3.3.4.950
Echo Protocol	3.3.4.950

#### Effective Date:

#### 2021-04-29

#### Purpose

This release incorporates improvements from newer Echo Protocol versions.

This firmware is used in the following stations:

- Elaho Inspire Control Stations
- Elaho Keyswitch Stations
- Elaho Preset Stations

For any questions relating to the contents of this release or the behavior of this firmware, please contact Echoflex Solutions using the information at the bottom of this page.

#### Availability

Elaho Inspire and Preset Stations ship from the factory with current firmware installed and are not field upgradable. Each Inspire and Preset Station will be labeled with the application version number (e.g. v3.3.4) for visual indication of the installed version.

#### Documentation

Current documentation for Elaho Inspire and Preset Stations include the *Inspire Station Installation Guide*, *Preset Station Installation Guide*, *Keyswitch Station Installation Guide*, *Inspire Station Programming Guide*, and the *ElahoAccess App integrated help system*.

Please keep this release note with your installation guide for descriptions of the newest features, changes, and bug fixes. Manuals are in portable document format (pdf) and are available for download at echoflexsolutions.com.

Additional support documentation can be found at support.etcconnect.com.



# Echoflex Solutions Release Note Inspire and Preset Station v3.3.4

#### Compatibility

For questions regarding compatibility, please contact Echoflex Solutions Technical Services.

#### **Compatible Elaho Products**

This release is interoperable with the following Elaho hardware and software/firmware:

Product	Earliest Device Compatibility	Optimal Feature Compatibility
ElahoAccess App-iOS	v1.0.0	v3.3.1
ElahoAccess App-Android	v1.0.0	v3.3.0
ElahoAccess Interface	v1.0.0	v3.3.4
Elaho Expansion Bridge	v1.0.0	v3.3.4
Elaho BACnet Interface	v3.0.0	v3.3.4
Elaho Integration Interface	v3.3.1	v3.3.4
ElahoTouch	v3.0.0	v3.1.0
Elaho DMX Scene Controller	v1.0.0	v3.3.4
Elaho-Echoflex Interface	v1.0.0	v3.3.4
Elaho Contact Input Interface	v1.0.0	v3.3.4
Elaho Contact Output Interface	v1.0.0	v3.3.4
Elaho Demand Response Interface	v2.0.0	v3.3.4
Elaho Responsive Controls	v1.0.0	v3.3.4
Elaho Dual Tech Occupancy and Vacancy Sensors	v1.0.0	v3.3.4
Elaho Dual Tech Switch-mount Occupancy Sensor	v1.0.0	v3.3.4
Elaho Room Controller - Gen2	v1.0.0	v3.3.4
Elaho Zone Controllers - Gen2	v1.0.0	v3.3.4
Elaho Inspire Stations	v3.0.0	v3.3.4
Elaho Keyswitch Stations	v3.2.0	v3.3.4
Elaho TimeClock	v1.0.0	v3.3.4
Elaho Preset Stations	v3.0.0	v3.3.4
Elaho Relay Panels	v1.0.0	v3.1.2

# **Echoflex Solutions Release Note**

#### Inspire and Preset Station v3.3.4

#### Key Enhancements in v3.3.4

• Incorporates improvements from newer Echo Protocol versions

#### Key Enhancements in v2.0.0

- Support for Open and Close time of day events
- Added support for viewing and issuing schedule Holds from EchoAccess
- Bug fixes

#### Key Enhancements in v1.0.0

• Initial release

#### Installation Instructions

This software is installed on new Elaho Inspire and Preset Stations as they are shipped from the factory and does not require update before use. Inspire and Preset Stations are not field-upgradable.

#### Issues Corrected in v3.3.4

None: Incorporates improvements from newer Echo Protocol versions

#### Known Issues Remaining in v3.3.4

EIS-45499	Knob studio mode CT & Tint levels jump down to lowest levels then raise on adjustment after Off
EIS-44845	'zone select' buttons indicate incorrectly as Amber in custom mode
EIS-44490	Adjusted Space Off timing may not be applied
EIS-44473	Multi-space control does not activate off indication until all channels reach off state
EIS-44158	Double-tapping locked out zone select button allows selection (though control is still prevented)
EIS-36927	Restoring defaults or disconnecting TimeClock from Echo bus during FlickWarn leaves stations indicating indefinitely
EIS-34119	E1104 knob LEDs don't reflect hue/sat levels when space combining with when space is combined with another space that has color zones
EIS-34089	Knob halo LEDs perform extra flashes after station boot and sync is complete
EIS-33368	Level sets to 0% for Zone don't show active Off status until fades complete
EIS-33309	Zone/Space Toggle and Set to 0% actions appear active while fading to Off
EIS-32796	A station indicating two presets because of a late joiner will not show second preset when first is toggled off
EIS-32782	Stations do not chase during user activity when an Output Product changes space
EIS-32714	Stations do not chase LEDs during user activity after connecting an Output Product
EIS-32319	Station can indicate false active off state if connect Echo bus between 2 output devices playing different presets and deactivate 1 of them
EIS-28145	Rotate for Space Lower followed by Knob push for Off does not honor hurry-up time via DIP4

EIS-27732 IR Remote Preset 10 button doesn't work

### Echoflex Solutions Release Note Inspire and Preset Station v3.3.4

#### Issues Corrected in Echo Protocol v3.3.4

EC-47203 Implement Echo Bus communication efficiency reporting

#### Issues Corrected in Echo Protocol v3.3.1

EC-47110 Active status indication can occasionally blink off on busy EchoConnect bus

#### **Issues Corrected in Echo Protocol v3.3.0**

EC-45338 Bus ID does not re-arbitrate if self powered device loses and later regains bus connectivity while remaining powered

#### Issues Corrected in Echo Protocol v3.2.0

EC-46663	16 occupancy sensors in the same space on a single Echo segment can cause missed Grace Restore
EC-46662	Occupancy devices sharing same ID on different EEB segments can cause missed Grace Restore
EC-46278	Grace Restore affects spaces it shouldn't in multi-space output products
EC-46206	Multiple Occupancy/Vacancy sensors in same space can cause missed vacancy actions in some situations
EC-46019	Within 30s of grace restore, the first zone/space action does not play
EC-45866	Group occupancy and vacancy actions can fail across ports of an EEB when 10 or more occupancy devices are in group
EC-45842	Occupancy/Vacancy sensors in same space on different EEB segments can impede all echo communication
EC-45656	DMX Scene Controller zone levels change after a preset record
EC-45520	Sequence status and Off status not indicated correctly when deactivating or issuing Off commands
EC-45333	Some Echo output products could erroneously restore from recent vacancy state
EC-45131	Output products can play off when asked to play a preset higher than their available presets
EC-45125	Space Off timing not honored when deactivating sequence in loop or single-shot mode in ERP/EACP/DMXSC
EC-45098	Active sequence can cause space level indication to change
EC-44677	Contact input can incorrectly play occupied look if contact opened between 30 and 59 seconds after power on
EC-44167	Incorrect indication for spaces combined via another combined space
EC-44126	Longer Than Expected Bus Lockout Activation With Late-Joining Output Devices in Lockout
EC-43700	Space Toggle toggles zones to 0% if any zone in a space is 100%
EC-42978	Adding late-joining unlocked output product to locked space temporarily shows incorrect unlocked status
EC-42559	Sequence controls in v3.1.0 stations (or mobile app v2.2.0) or newer does not indicate "On" and cannot deactivate sequences in older EACP, ERP, and CEM3 systems
EC-40980	Two output products with different presets active can result in preset status that occasionally flickers
EC-40328	Late Joining hosts do not acquire space combine status
EC-37977	Both OFF and sequence appear as active simultaneously after a preset deactivation during bounce sequence
EC-35960	Station indication can be wrong due to manual control that causes occupancy grace restore across EEB interfaces
EC-35153	Stations incorrectly still show active space combine status if a new output controller is added to bus after combine
EC-34376	It can take up to 60 seconds for a newly added output device to properly participate in Space Combine

# Echoflex Solutions Release Note Inspire and Preset Station v3.3.4

# Known Issues Remaining in Echo Protocol v3.3.4

EC-47116	Space Toggle button on Inspire station not affected by level of ET channel not patched to zone
EC-47111	Zone/Preset/Sequence status can "flutter" very occasionally due to a receiving host timer rollover
EC-47077	Multispace off button occasionally flashes on when sequence is still playing
EC-47074	Off actions using timing from an active preset rather than the 2 second standard
EC-47070	Mobile app shows sequences active for sequences 2-4, not just 1
EC-47063	Multispace hosts maintain preset status in previously-patched spaces
EC-46888	Late joining occupancy sensor controls will assert their configured occupancy action even if associated group was already in occupied state
EC-45629	Hold event configured with fade time for "set to color" actions fades intensity on hold
EC-45596	Differing space/zone levels across bridge segments causes station indication to bounce between values
EC-45462	"Uncombine All" may not uncombine all combined spaces on full Echo bus.
EC-45202	Editing spaces affected by a Demand Response input momentarily sets spaces to false during true condition
EC-44495	Products with Power on behavior can show active zone levels and activated Off status at same time
EC-44432	Manual control from non native space does not trigger occupancy when occupancy action is multi-space
EC-44154	Occupancy groups, vacancy inhibit, and photo inhibit do not support all spaces of a multi-space action
EC-43350	Accessing the Config page on multiple simultaneous mobile app connections causes duplicate devices to be listed
EC-43262	Vacancy action Preset activate can be missed after a grace restore has been triggered due to support for older Occupancy sensors
EC-43138	On occasion large batches of patch config messages can fail to transmit correctly resulting in skipped addresses
EC-43020	When two presets are active in the same space, preset indication toggles between both presets
EC-42572	Unable to toggle sequence off from combined space that does not possess a sequence enabled output product
EC-42401	Space Combine Toggle won't uncombine spaces without any host output products
EC-38851	Late joining bridge results in oscillating mismatched Zone values if different segments have different values for same zones
EC-38839	Late joining bridge results in oscillating mismatched statuses if different segments have different status for same spaces
EC-38694	Zone status does not zero out after last output product for that zone changes to new space
EC-35126	Space toggle when Zones are not at full sets Zones to 0 rather than all at full
EC-34543	Sequence indicator toggles state rapidly when output device with sequence active late joins Echo bus with output device that has inactive sequence
EC-28417	Station activity during sync period following connection of late joining output product incorrectly does not cause LED chase